

GPRS



This feature is available only on [camera models](#) with 2G or 3G modems.

GPRS enables the camera to connect to servers via GSM networks.



For most Russian mobile operators, it is not necessary to configure GPRS. It can work with missing or incorrect settings.

You can configure GPRS using [SMS commands](#) or [Mobile App](#). To get the configuration data contact your mobile operator.

Other sending options

- [FTP](#)
- [GPRS](#)
- [MMS](#)
- [Yandex Disk](#)

Related Articles

- [Automatic Update](#)
- [Burst Mode](#)
- [Photo Archive](#)
- [Photo Counter](#)
- [PIR Sensor](#)
- [Sending Features](#)
- [Timers](#)

From:

<https://doc.camkubik.com/> - **KUBIK KB**

Permanent link:

<https://doc.camkubik.com/en:functions:sending:gprs>

Last update: **2021/02/09 10:49**