

Interval Timer Shooting

Interval Timer Shooting provides the option to take photos at pre-set intervals from 5 minutes to one hour.



At the same time, other timers and the PIR Sensor turn off.

After Interval Timer Shooting is activated, the camera starts sending photos at pre-set intervals. Please note that the time required for sending the photo should be added to the time period set by the user. Depending on the quality of connection, sending can take up to a few minutes.



Note! This mode consumes more battery power. Therefore, you should use an external power supply.

You can set the Interval Timer using [SMS commands](#) and the [Mobile App](#).

When to use the Interval Timer

The Interval Timer can be used to monitor such objects as roads, bridges, level crossings. Using interval shooting you can monitor the state of the object at a pre-set interval on a twenty-four hour basis.

Related Articles

- [Automatic Update](#)
- [Burst Mode](#)
- [FTP](#)
- [GPRS](#)
- [Interval Timer Shooting](#)
- [MMS](#)
- [Photo Archive](#)
- [Photo Counter](#)
- [PIR Sensor](#)
- [PIR Sensor On/Off Timers](#)
- [Sending Features](#)
- [Shooting Timer](#)
- [Timers](#)
- [Yandex Disk](#)

From:

<https://doc.camkubik.com/> - **KUBIK KB**

Permanent link:

https://doc.camkubik.com/en:functions:timers:periodical_sht

Last update: **2021/02/09 10:58**