


# Quick Snapshot Screen


This screen lets you use the App to evaluate camera settings by taking a quick snapshot.

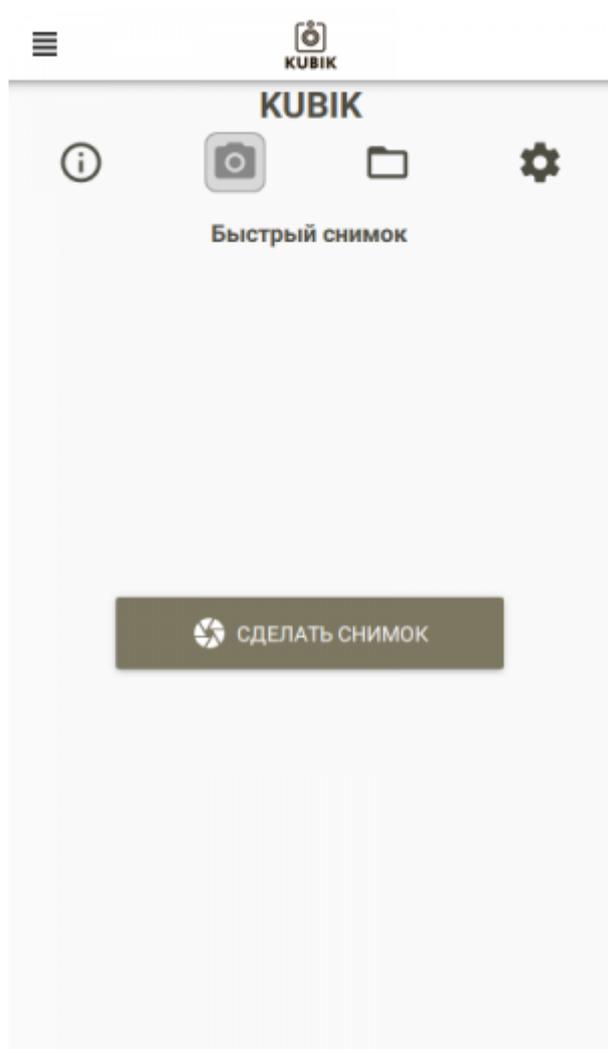


After clicking the “Take Photo” button, shooting mode will be activated. If the camera is currently busy saving another photo, a corresponding notification will be displayed, and you can make another attempt.



Shooting is done in low resolution to reduce the size of transmitted data.

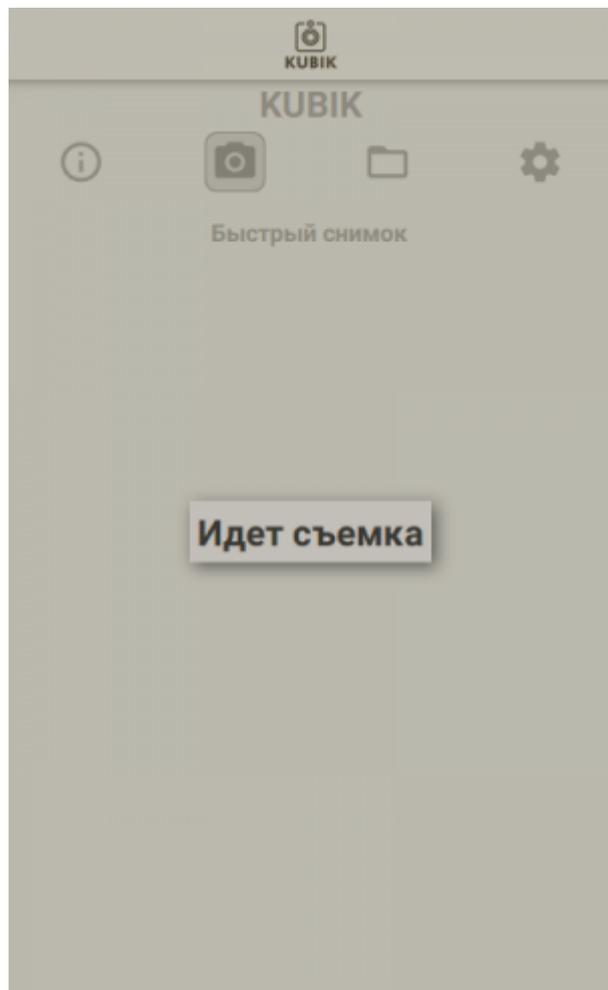

✕ Остановить

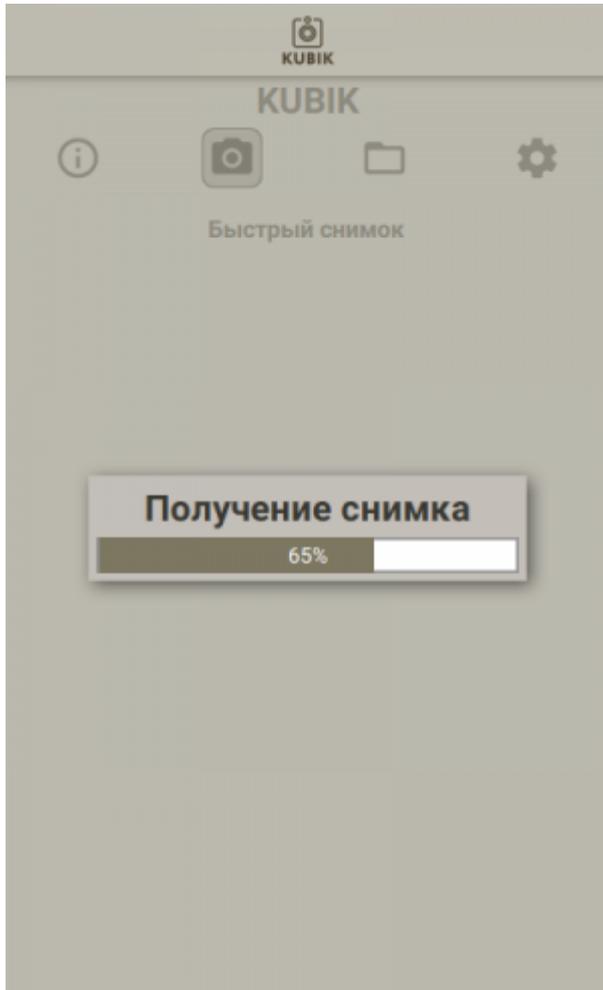


Остановить



Receiving a photo can take a long time. The reasons for this are relatively low bandwidth of Bluetooth Low Energy and possible noises in the channel.



If a transmission error occurs or the device was disconnected while receiving a photo, try moving closer to the device.

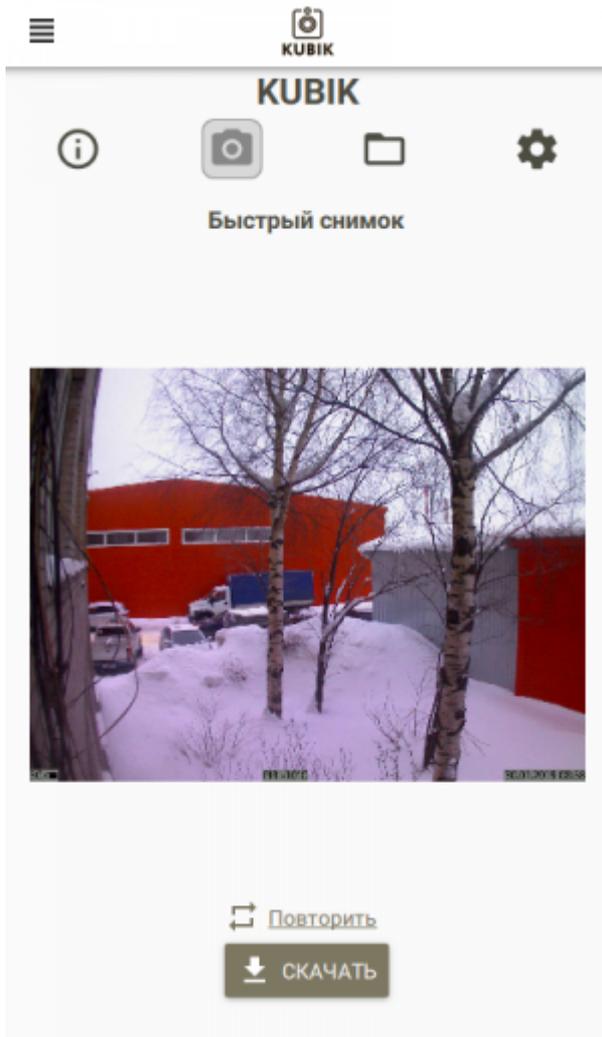

After receiving a photo, you can save it to the Gallery or request one more snapshot.

#### Related articles

- [Camera Settings](#)
- [Device Information Screen](#)
- [Photo Archive](#)
- [Quick Snapshot Screen](#)
- [Searching for device and connection](#)

From: <https://doc.camkubik.com/> - **KUBIK KB**

Permanent link: [https://doc.camkubik.com/en:settings:mobile:fast\\_shout](https://doc.camkubik.com/en:settings:mobile:fast_shout)

Last update: **2021/02/09 12:32**