


Device Settings

In this section you can set a name for your device and change the access password.

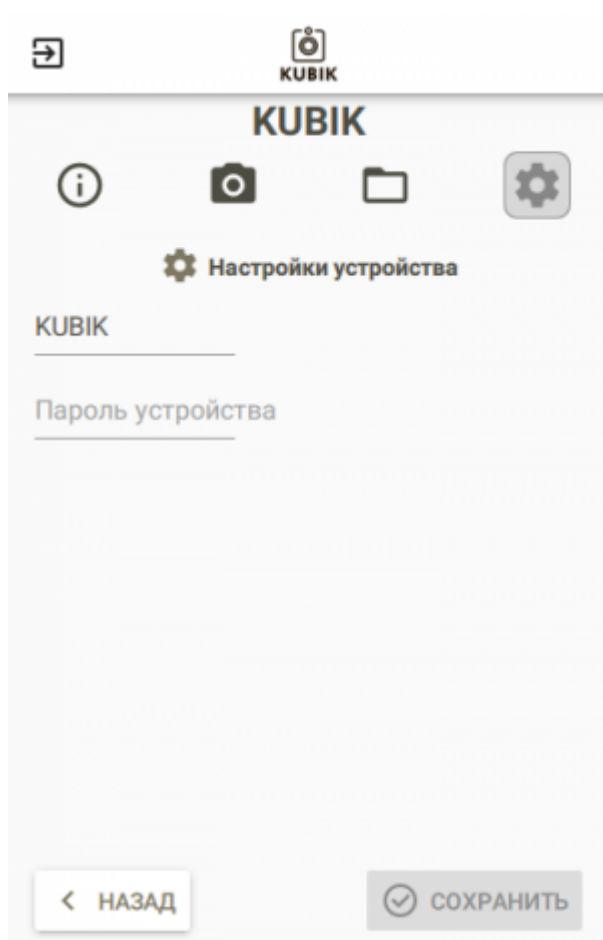

Device Name



Device name must not be longer than 6 characters.

Device name is a name which is displayed in the application, notifications and SMS. We recommend that you create an informative and clear device name for you.

Device Password

This field changes the camera access password. This password will be used when connecting to the camera via Bluetooth and using [SMS commands](#).



Password must be 4-6 characters



Password will be applied after disconnecting from the device

Saving Settings

To save the settings, click the **“Сохранить”** button and wait until the standby screen turns off.



It may take a long time to save settings. Stay close to the device while saving settings.

Related articles

- [Automatic Update](#)
- [Device Settings](#)
- [Installation Coordinates](#)
- [PIR Sensor Settings](#)
- [Sending Settings](#)
- [Shooting Settings](#)
- [System Settings](#)
- [Time Synchronization](#)
- [Timer Settings](#)
- [Режимы SMS](#)

From:

<https://doc.camkubik.com/> - **KUBIK KB**

Permanent link:

<https://doc.camkubik.com/en:settings:mobile:settings:device>

Last update: **2021/02/09 11:07**