


FTP Settings

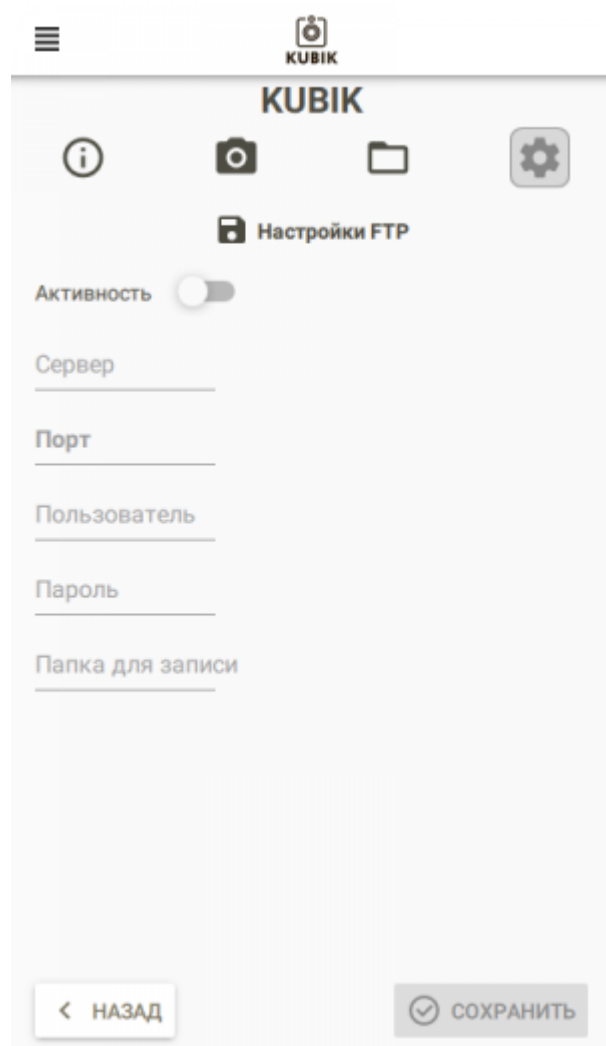

In this section you can configure [FTP connection for uploading images](#).

Active Status

This toggle lets you enable and disable uploading photos to the FTP Server.

Server

You must enter your FTP Server address in this field.

Port

You must enter the port of your FTP Server in this field. In most cases it is **21**.

User

You must enter your username for the authorization on the FTP Server in this field.

Password

You must enter your password for the authorization on the FTP Server in this field.

Folder for storing

You can specify a folder where images will be stored. Thus, having several cameras you can store photos of each one in a separate folder. It is better to set a full path to the folder starting from the home directory of the user on whose behalf authorization is performed. For example,
/cameras/HomeCamera

Other sending options

- [FTP Settings](#)
- [GPRS Settings](#)
- [MMS Settings](#)
- [SMTP Settings](#)
- [Yandex Disk Settings](#)

Related articles

- [Automatic Update](#)
- [Device Settings](#)
- [Installation Coordinates](#)
- [PIR Sensor Settings](#)
- [Sending Settings](#)
- [Shooting Settings](#)
- [System Settings](#)
- [Time Synchronization](#)
- [Timer Settings](#)
- [Режимы SMS](#)

From:

<https://doc.camkubik.com/> - **KUBIK KB**

Permanent link:

<https://doc.camkubik.com/en:settings:mobile:settings:sending:ftp>

Last update: **2021/02/09 12:00**