


Yandex Disk Settings

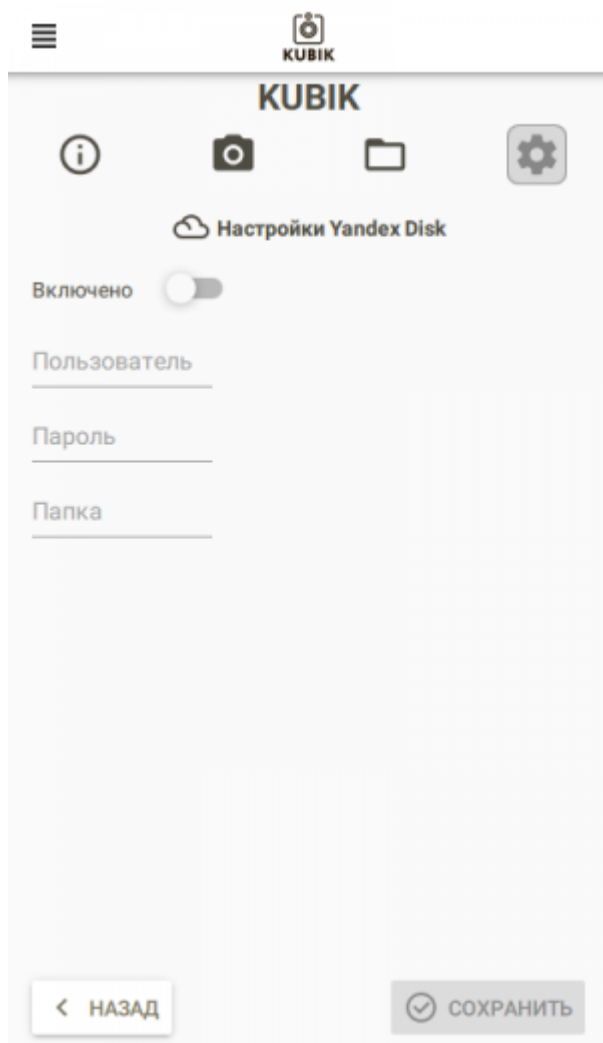

In this section you can configure parameters for sending photos to [Yandex Disk](#).

Enable

With this switch you can enable or disable sending images to Yandex Disk.

User

You must enter Yandex Disk username in this field.



You can use both Yandex Disk accounts on the @yandex.ru domain and on linked domains.

Folder

You should specify a folder where photos will be stored (using a forward slash /). If nothing is specified, then all images will be stored in the Yandex Disk root directory.

Example

```
/kubik
```

It means that all photos will be sent to the folder *kubik* in the Yandex Disk root directory.

Other sending settings

- [FTP Settings](#)
- [GPRS Settings](#)
- [MMS Settings](#)
- [SMTP Settings](#)
- [Yandex Disk Settings](#)

Related articles

- [Automatic Update](#)
- [Device Settings](#)
- [Installation Coordinates](#)
- [PIR Sensor Settings](#)
- [Sending Settings](#)
- [Shooting Settings](#)
- [System Settings](#)
- [Time Synchronization](#)
- [Timer Settings](#)
- [Режимы SMS](#)

From:

<https://doc.camkubik.com/> - **KUBIK KB**

Permanent link:

<https://doc.camkubik.com/en:settings:mobile:settings:sending:yd>

Last update: **2021/02/09 12:03**