


Timer Settings

In this section you can configure settings for all timers which the KUBIK camera has.



- [PIR Sensor Runtime Settings](#)
- [Shooting Timer](#)
- [Interval Timer](#)
- [Resetting all timers](#)

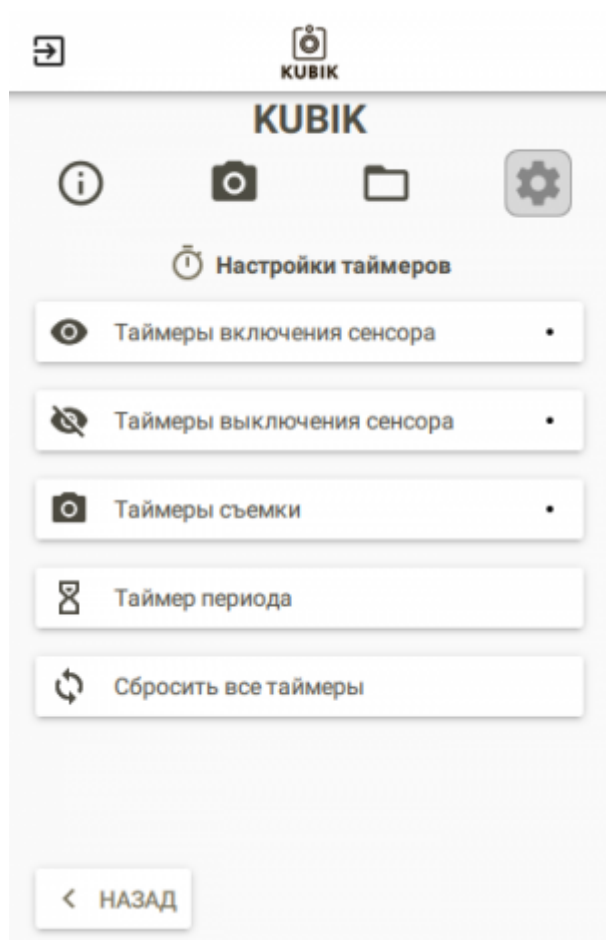

If the name of a timer group marked with a dot, then there is an active timer in this timer group.

Related articles

- [Automatic Update](#)
- [Device Settings](#)
- [Installation Coordinates](#)
- [PIR Sensor Settings](#)
- [Sending Settings](#)
- [Shooting Settings](#)

- [System Settings](#)
- [Time Synchronization](#)
- [Timer Settings](#)
- [Режимы SMS](#)

From:

<https://doc.camkubik.com/> - **KUBIK KB**

Permanent link:

<https://doc.camkubik.com/en:settings:mobile:settings:timers>

Last update: **2021/02/09 11:47**